


100

**FIG. 1**

	110	112	114	116	
TAG	HEADER DATA	MANUFACTURER IDENTIFIER	PRODUCT IDENTIFIER	SERIAL NUMBER	
1	01	0001	0001	0101	220
2	01	0001	0001	0000	221
3	01	0001	0001	1011	222
4	01	1010	0010	0110	223
5	01	0001	0011	0001	224
6	01	0000	0100	1100	225

200

**FIG. 2**

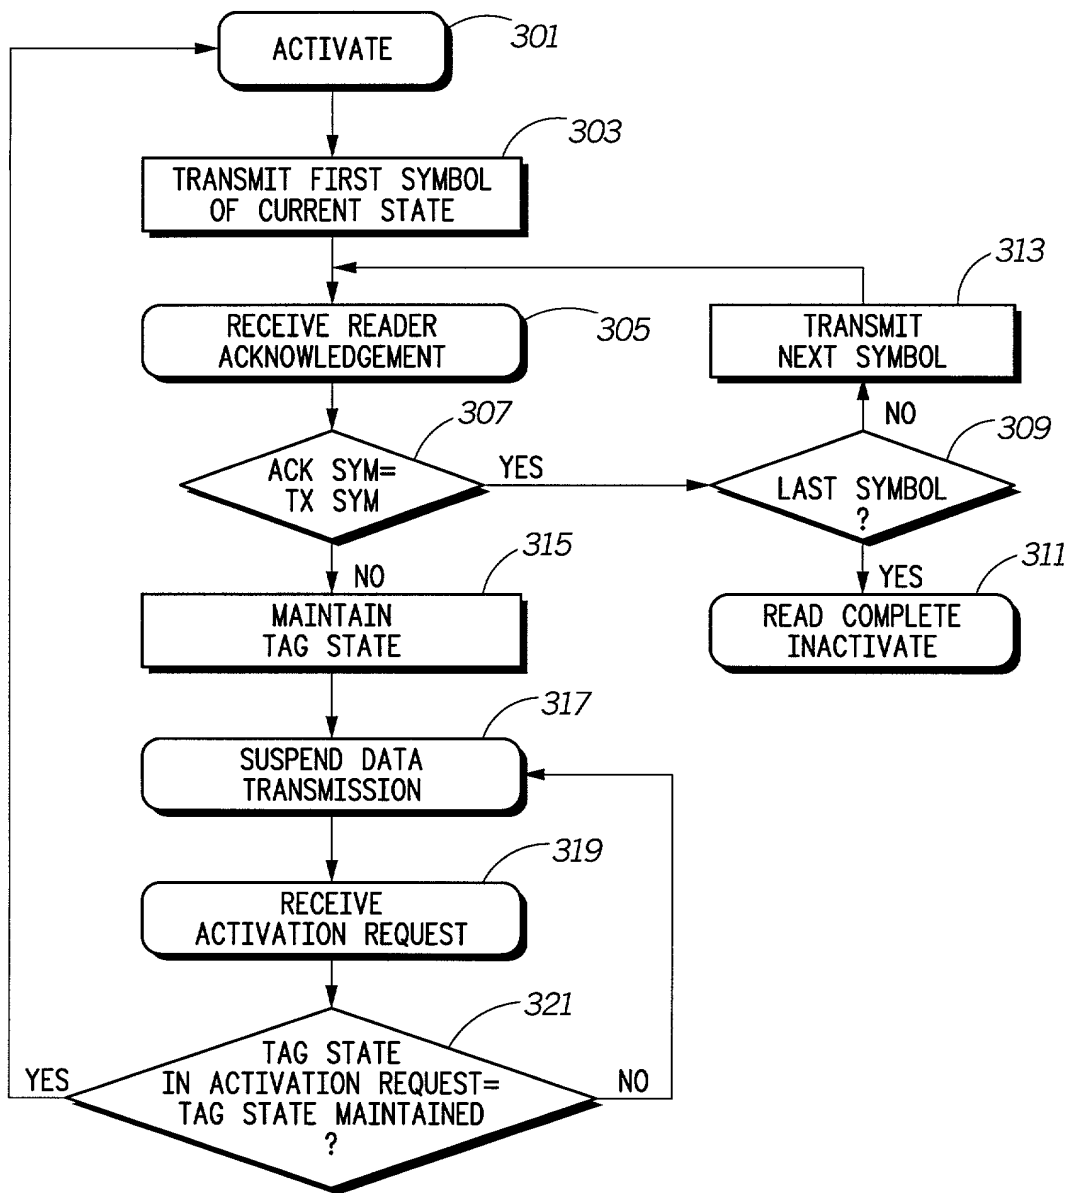

**FIG. 3**

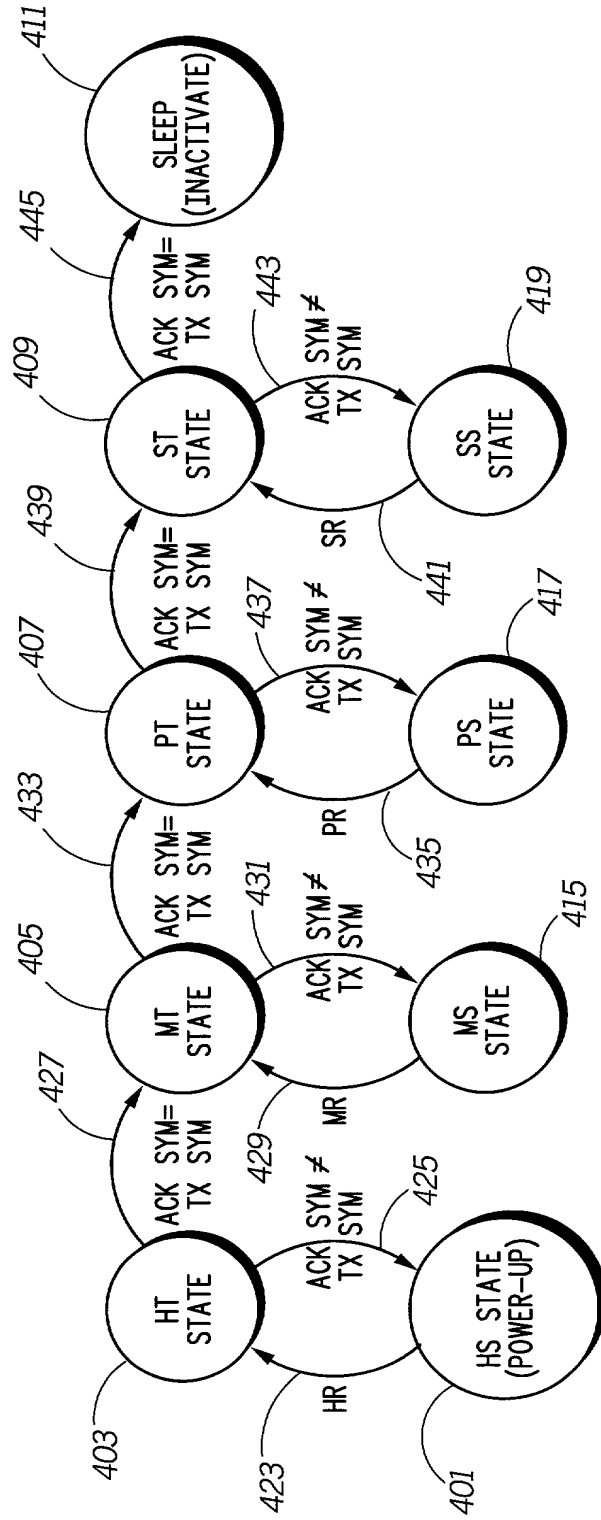


FIG. 4

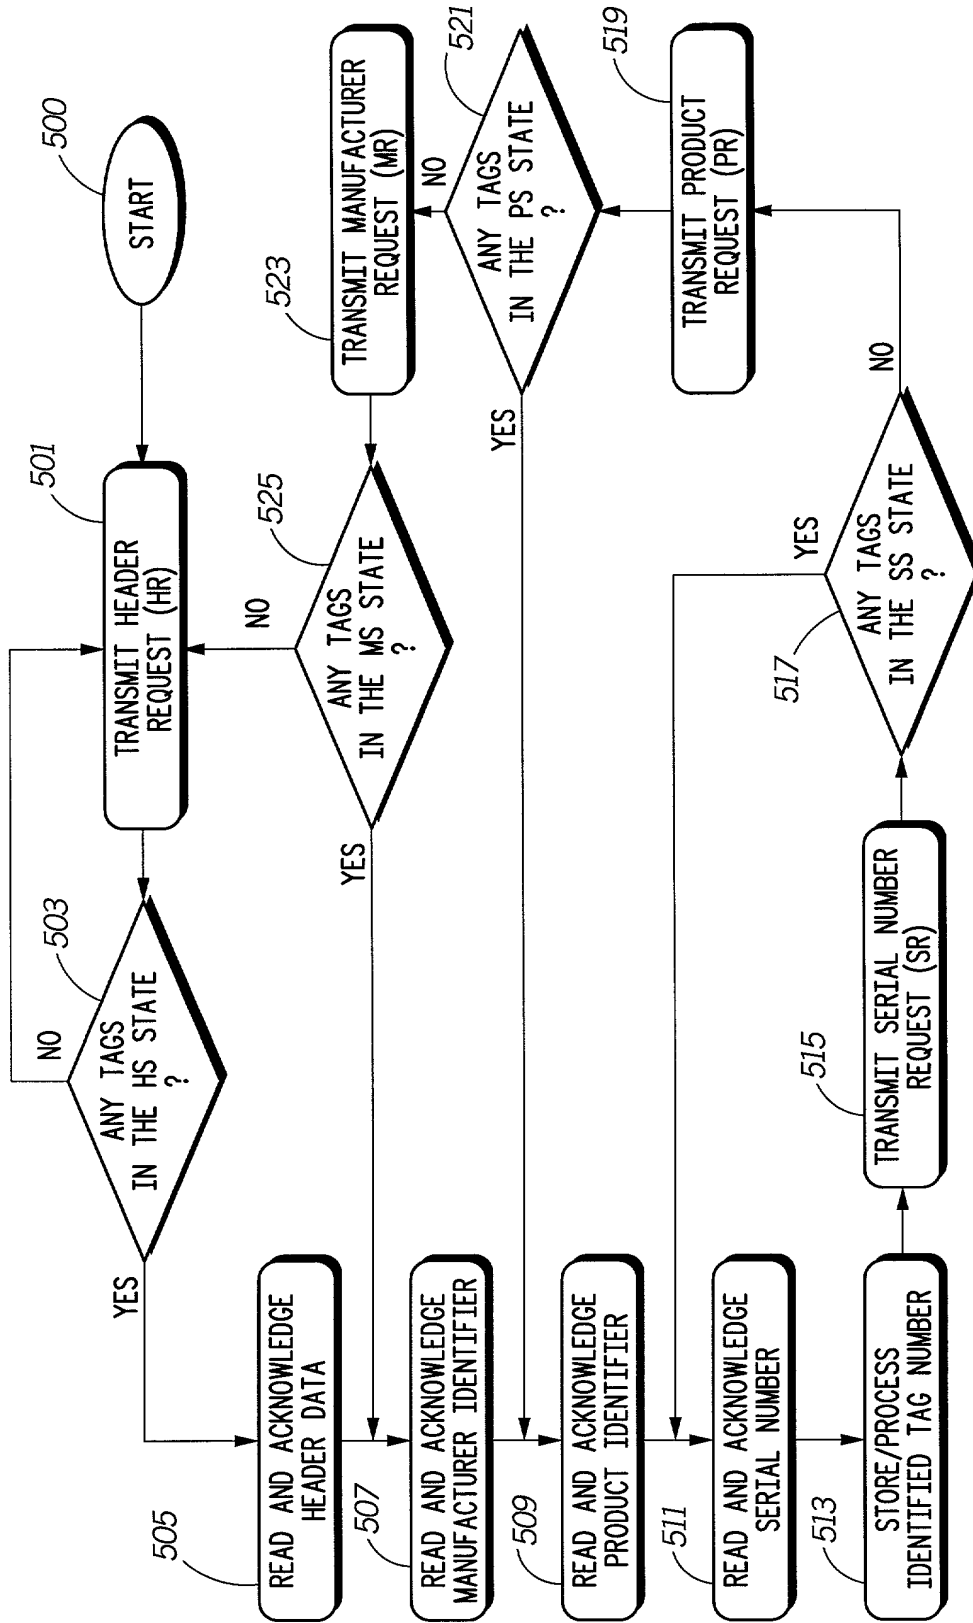


FIG. 5

[illegible][illegible][illegible]

**FIG. 6**

	STAT 1	STAT 2	STAT 3	STAT 4	5	6	7	STAT 8	9	10	11	STAT 12	13	14	15	STAT 16	17	18	19	20	STAT 21	STAT 22	23	24	25	STAT 26	27	28	STAT 29	30	31	32	STAT
READER	HR		01		00	01		00	01		00	01		00	00	SR	SR	01	10	11	SR		01	01		01	SR	PR		00		11	
TAG 1	01-0001-0001-0101	HS	HT	01	MT	00	01	PT	00	01		ST	01	SS		SS	ST	01	SS		SS		01	01		SL		SL					SL
TAG 2	01-0001-0001-0000	HS	HT	01	MT	00	01	PT	00	01		ST	00	00		SL	SL				SL					SL		SL					SL
TAG 3	01-0001-0001-1011	HS	HT	01	MT	00	01	PT	00	01		ST	10	SS		SS	ST	10	11		SL					SL		SL					SL
TAG 4	01-1010-0010-0110	HS	HT	01	MT	10	MS					MS				MS	MS				MS					MS		MS					MS
TAG 5	01-0001-0011-0001	HS	HT	01	MT	00	01	PT	00	11	PS	PS				PS	PS				PS					PS		PT	00		11		ST
TAG 6	01-0000-0100-1100	HS	HT	01	MT	00	00	MS	MS			MS				MS	MS				MS					MS		MS					MS



	33	34	35	36	STAT 37	38	39	40	41	STAT 42	43	44	45	STAT 46	47	48	49	STAT 50	51	52	53	STAT 54	55	56	57	58	STAT 59	60	61	62	STAT 63	64	65	66	STAT 67	68	69	70	STAT	
READER	00	01			SR		SR	PR	MR		00	00		01	01		00		11	00		SR		PR	MR		SR		10	10		00	10		01		10			
TAG 1					SL					SL				SL				SL				SL					SL								SL			SL		
TAG 2					SL					SL				SL				SL				SL					SL								SL			SL		
TAG 3					SL					SL				SL				SL				SL					SL								SL			SL		
TAG 4					MS					MT	10	MS		MS				MS				MS					MT	10	10		PT	00	10		ST	01		10		SL
TAG 5	00	01			SL					SL				SL				SL				SL					SL								SL			SL		SL
TAG 6					MS					MT	01	00		PT	11	00		ST	11	00		SL					SL								SL			SL		SL

FIG. 7

FIG. 8

		860			862			864			866			7/7									
		HEADER BUFFER			MFR. BUFFER			PRODUCT BUFFER			SER.# BUFFER			MEMORY BUFFER									
0		XX	XX	XX	XX	XX	XX	XX	XX	XX	XX	XX	XX										
1	HR																						
3	01	01																					
5	00	01	00																				
7	01	01	00	01																			
9	00	01	00	01	00																		
11	01	01	00	01	00	01																	
13	00	01	00	01	00	01	00	01	00														
15	00	01	00	01	00	01	00	01	00	00													
16	SR	01	00	01	00	01	00	01	00	01				01	00	01	00	01	00	00			
18	10	01	00	01	00	01	00	01	10														
20	11	01	00	01	00	01	00	01	10	11													
21	SR	01	00	01	00	01	00	01						01	00	01	00	01	10	11			
23	01	01	00	01	00	01	00	01	01														
25	01	01	00	01	00	01	00	01	01	01													
26	SR	01	00	01	00	01	00	01						01	00	01	00	01	01	01			
28	PR	01	00	01																			
30	00	01	00	01	00																		
32	11	01	00	01	00	11																	
34	00	01	00	01	00	11	00																
36	01	01	00	01	00	11	00	01															
37	SR	01	00	01	00	11								01	00	01	00	11	00	01			
39	PR	01	00	01																			
41	MR	01																					
43	00	01	00																				
45	00	01	00	00																			
47	01	01	00	00	01																		
49	00	01	00	00	01	00																	
51	11	01	00	00	01	00	11																
53	00	01	00	00	01	00	11	00															
54	SR	01	00	00	01	00								01	00	00	01	00	11	00			
56	PR	01	00	00																			
58	MR	01																					
60	10	01	10																				
62	10	01	10	10																			
64	00	01	10	10	00																		
66	10	01	10	10	00	10																	
68	01	01	10	10	00	10	01																
70	10	01	10	10	00	10	01	10															
71	SR													01	10	10	00	10	01	10			

FIG. 8